


Roof before venting is added

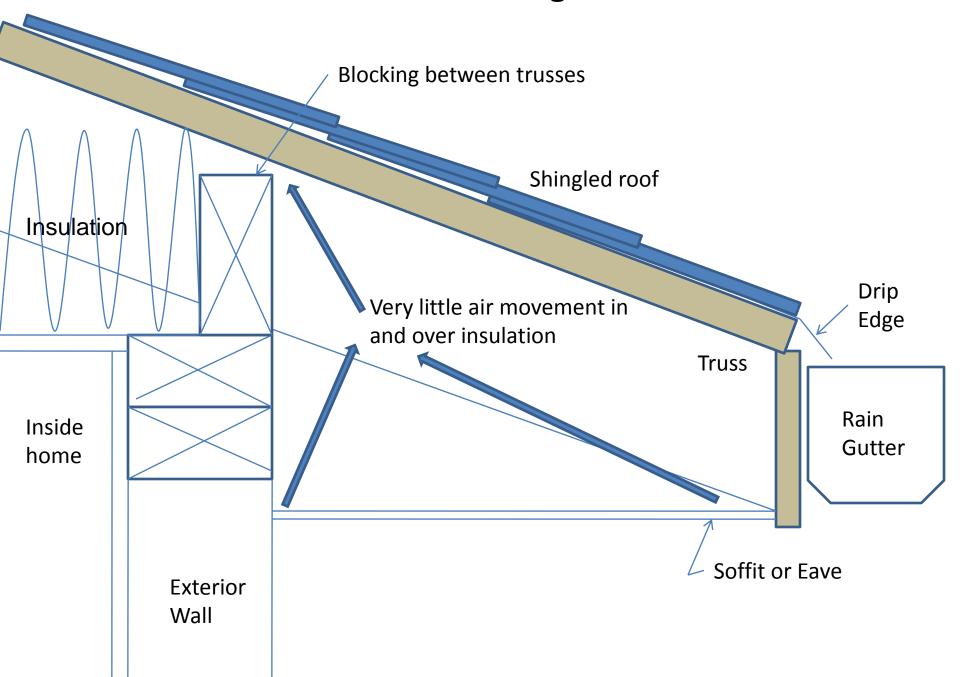

Roof venting after adding soffit vents Baffle (cardboard or other thin material) Blocking between trusses May require larger trimmed. Min of 1" gap or additional roof vents or gable end vents. Shingled roof Insulation Drip Edge Cold air Truss flow Rain Inside Gutter home Soffit or Eave Exterior Louvered vent /grill Wall with 1/4" mesh behind